



Firmware Update Instructions for the Intermatic ET90000 Series

Before starting the firmware update process, download the latest firmware file from www.intermatic.com and save it to a USB memory stick.

The firmware file must be saved in the root folder of the USB memory stick (do not place in a folder). It is recommended that only the required files be on the USB memory stick.

NOTE: It is **highly recommended** to save a backup of the current schedule on the USB memory stick prior to updating the firmware.

1. From Status screen, press **ENTER**.
2. Press down arrow to scroll to **ADVANCED OPTIONS** and then press **ENTER**.
3. Press left arrow to advance to **SYSTEM CONFIG** screen.
4. Press down arrow to scroll to **FIRMWARE UPDATE** and then press **ENTER**.
5. When an insert a USB stick message appears, insert your USB stick into the timer. The **Select Program** screen appears.
6. Press down arrow to scroll to **FIRMWARE325.FWR** and press **ENTER**.
A Firmware Update in Progress message briefly appears indicating firmware is loading.
7. When an OK to remove USB message appears, remove USB stick.
The timer advances to Status screen.

NOTE: If the timer advances to the **INITIAL SETUP/ADVANCED OPTIONS** screen, press **ESC** to advance to Status screen.